


1. Plugged the USB connector to PC

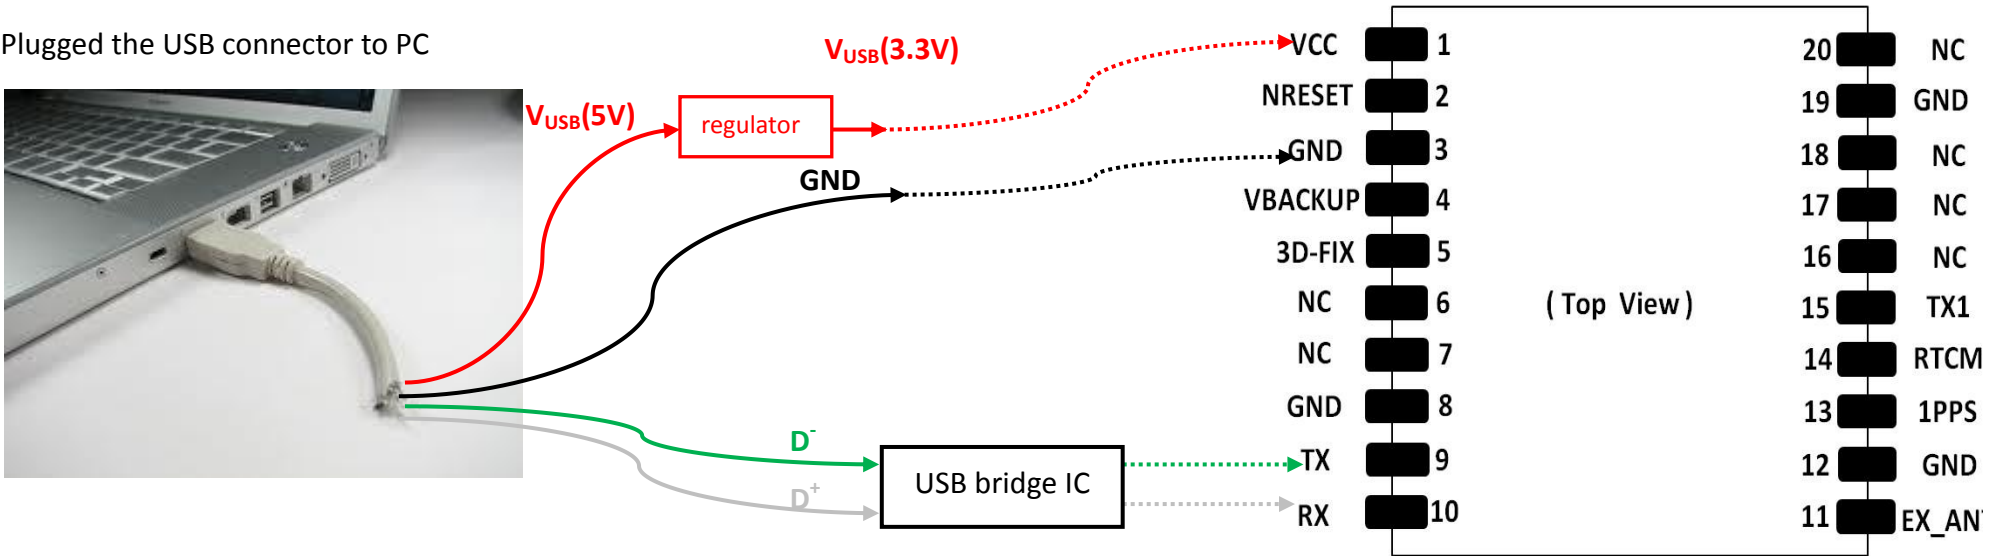

2. V_{USB} need connect regulator for voltage step-down, that region is 3.0 ~ 4.3V and recommend 3.3V.
(The V_{cc} ripple must be controlled under 50m V_{pp} .)
3. $V_{USB}(3.3V)$ supply power to V_{cc} (pin 1)
4. USB_{D+} / USB_{D-} connect to **USB bridge IC**(transfer USB to UART interface)
5. **USB bridge IC** connect to FGPM6H module T_x / R_x (pin 9,10)
6. Install the **USB bridge IC** driver