



GlobalTop

PMTK command packet

Rev.A04

The document is the exclusive property of GlobalTop Tech Inc. and should not be distributed, reproduced, or any other format without prior permission of GlobalTop Tech Inc. Specifications subject to change without prior notice

GlobalTop Tech Inc.

3rd Floor., No.7 Nan-ke 3rd Rd Science-based Ind. Park, Tainan 741-47, Taiwan, R.O.C.
Tel:+886-6-6007799 Fax:+886-6-5053381 <http://www.gtop-tech.com/> email: sales@gtop-tech.com
Copyright© 2009 GlobalTop Tech Inc. All right reserved.



Revision History

Revision	Date	Author	Description
A03	2010-07-13	Brian	
A04	2010-09-09	Gavin	Add 001,605,705 command packet Add :Notice section

The document is the exclusive property of GlobalTop Tech Inc. and should not be distributed, reproduced, or any other format without prior permission of GlobalTop Tech Inc. Specifications subject to change without prior notice

GlobalTop Tech Inc.

3rd Floor., No.7 Nan-ke 3rd Rd Science-based Ind. Park, Tainan 741-47, Taiwan, R.O.C.
Tel:+886-6-6007799 Fax:+886-6-5053381 <http://www.gtop-tech.com/> email: sales@gtop-tech.com
Copyright© 2009 GlobalTop Tech Inc. All right reserved.



MTK NMEA Packet List:

MTK NMEA Packet List: 3

MTK NMEA Packet Format 4

 Packet Type: 001 PMTK_ACK 5

 Packet Type: 101 PMTK_CMD_HOT_START..... 5

 Packet Type: 102 PMTK_CMD_WARM_START 5

 Packet Type: 103 PMTK_CMD_COLD_START 6

 Packet Type: 104 PMTK_CMD_FULL_COLD_START..... 6

 Packet Type: 220 PMTK_SET_NMEA_UPDATERATE 6

 Packet Type : 250 PMTK_SET_DPort..... 7

 Packet Type : 251 PMTK_SET_NMEA_BAUDRATE..... 7

 Packet Type: 300 PMTK_API_SET_FIX_CTL..... 8

 Packet Type: 301 PMTK_API_SET_DGPS_MODE 8

 Packet Type: 313 PMTK_API_SET_SBAS_ENABLED..... 9

 Packet Type : 314 PMTK_API_SET_NMEA_OUTPUT 9

 Packet Type: 319 PMTK_API_SET_SBAS_Mode..... 10

 Packet Type: 413 PMTK_API_Q_SBAS_ENABLED 10

 Packet Type: 513 PMTK_DT_SBAS_ENABLED..... 11

 Packet Type: 605 PMTK_Q_RELEASE 11

 Packet Type: 705 PMTK_DT_RELEASE 11

Notice: 12

 How to acquire that CheckSum value by checksum tool..... 12

 Command Setting Reset Notice 12

The document is the exclusive property of GlobalTop Tech Inc. and should not be distributed, reproduced, or any other format without prior permission of GlobalTop Tech Inc. Specifications subject to change without prior notice

GlobalTop Tech Inc.

3rd Floor., No.7 Nan-ke 3rd Rd Science-based Ind. Park, Tainan 741-47, Taiwan, R.O.C.
Tel:+886-6-6007799 Fax:+886-6-5053381 <http://www.gtop-tech.com/> email: sales@gtop-tech.com
Copyright© 2009 GlobalTop Tech Inc. All right reserved.



MTK NMEA Packet Format

Preamble	TalkerID	PktType	DataField	*	CHK1	CHK2	CR	LF
----------	----------	---------	-----------	---	------	------	----	----

Maximum packet length is restricted to 255 bytes.

Field	Length	Type	Description
Preamble	1 byte	Character	"\$"
TalkerID	4 byte	Character string	"PMTK"
PktType	3 byte	Character string	From "000" to "999", an identifier used to tell the decoder how to decode the packet
DataField	Variable		A "," must be inserted before each data field to help decoder process the DataField
*	1 byte	Character	The star symbol is used to mark the end of DataField
CHK1, CHK2	2 byte	Character string	Checksum of the data between preamble "\$" and "*"
CR, LF	2 byte	Binary data	Used to identify the end of a packet

Sample Packet: \$PMTK000*32<CR><LF>

To inform the sender whether or not the module has received the packet, an acknowledge packet PMTK_ACK should be returned after the command is successfully given.

Pkt Type	Abbreviation / Syntax	Data Field	meaning / Example / Return
000	PMTK_TEST	None	Test Packet \$PMTK000*32<CR><LF>
001	PMTK_ACK PMTK001,Cmd,Flag	Cmd: Command / packet type the acknowledge responds Flag: 0 = Invalid command / packet 1 = Unsupported command / packet type 2 = Valid command / packet, but action failed 3 = Valid command / packet, and action succeeded	Acknowledge of PMTK command \$PMTK001,604,3*32<CR><LF>
010	PMTK_SYS_MSG PMTK001,Msg	Msg: System message. 0 : Unknown 1: Startup	Output system message \$PMTK010,001*2E<CR><LF>

Also, if the GPS module was restarted by command, both "\$PMTK010,001*2E<CR><LF>" and \$PMTK011,MTKGPS*08<CR><LF>" will be returned at the same time after GPS receiver has successfully completed boot-up stage.

The document is the exclusive property of GlobalTop Tech Inc. and should not be distributed, reproduced, or any other format without prior permission of GlobalTop Tech Inc. Specifications subject to change without prior notice

GlobalTop Tech Inc.



Note:

When the power of device (module) is removed, any modified setting will be lost and reset to factory default setting. If the device (module) has backup power supply through VBACKUP or coin battery, it will be able to keep the modified setting until the backup power is exhausted.

Packet Type: 001 PMTK_ACK

Packet Meaning:

Acknowledge of PMTK command

DataField:

PMTK001,Cmd,Flag

Cmd: The command / packet type the acknowledge responds.

Flag: '0' = Invalid command / packet.

'1' = Unsupported command / packet type

'2' = Valid command / packet, but action failed

'3' = Valid command / packet, and action succeeded

Example:

\$PMTK001,604,3*32<CR><LF>

Packet Type: 101 PMTK_CMD_HOT_START

Packet Meaning:

Hot Restart: Use all available data in the NV Store.

DataField:

None

Example:

\$PMTK101*32<CR><LF>

Packet Type: 102 PMTK_CMD_WARM_START

Packet Meaning:

Warm Restart: Don't use Ephemeris at re-start.

DataField:

None

Example:

\$PMTK102*31<CR><LF>



Packet Type: 103 PMTK_CMD_COLD_START

Packet Meaning:

Cold Restart: Don't use Time, Position, Almanacs and Ephemeris data at re-start.

DataField:

None

Example:

\$PMTK103*30<CR><LF>

Packet Type: 104 PMTK_CMD_FULL_COLD_START

Packet Meaning:

Full Cold Restart: It's essentially a Cold Restart, but additionally clear system/user configurations at re-start. That is, reset the receiver to the factory status.

DataField:

None

Example:

\$PMTK104*37<CR><LF>

Packet Type: 220 PMTK_SET_NMEA_UPDATERATE

Packet Meaning:

Set NMEA port update rate

DataField:

Position fix interval(msec). The possible interval values range between 100 and 10000 msec.

Example:

\$PMTK220,1000*1F<CR><LF>

\$PMTK220,200*2C<CR><LF>

\$PMTK220,100*2F<CR><LF>

Note :

1000(msec) = 1(sec) → 1/1 = 1Hz

200(msec) = 0.2(sec) → 1/0.2 = 5 Hz

100(msce) = 0.1(sec) → 1/0.1 = 10 Hz

- 1F is checksum

- CR, LF : Two bytes binary data

- The two bytes are used to identify the end of a packet



Packet Type : 250 PMTK_SET_DPort

Packet meaning

Set data port's (RTCM PORT or 2nd UART PORT) baud rate and input/output type

DataField:

PMTK250, InType, OutType, Baudrate

InType : Data port input data type

'0' = DPORT_IN_NONE (No data input)

'1' = DPORT_IN_RTCM (RTCM input)

'3' = DPORT_IN_NMEA (MTK NMEA)

OutType : Data port output data type

'0' = DPORT_OUT_NONE (No data output)

'3' = DPORT_OUT_NMEA (MTK NMEA)

Baudrate : 4800,9600,14400,19200,38400,57600,115200

Example :

```
$PMTK250,1,0,9600*17<CR><LF>
```

Packet Type : 251 PMTK_SET_NMEA_BAUDRATE

Packet Meaning :

Set NMEA port baud rate

DataField :

PMTK251, Baudrate

Baudrate setting : 4800,9600,14400,19200,38400,57600,115200

Example :

```
$PMTK251,38400*27<CR><LF>
```

Note :

27 is checksum

CR, LF : Two bytes binary data

The two bytes are used to identify the end of a packet



Packet Type: 300 PMTK_API_SET_FIX_CTL

Packet Meaning:

API_Set_Fix_Ctl

This parameter controls the rate of position fixing activity.

DataField:

PMTK300,FixInterval,0,0,0,0

FixInterval: Position fix interval [msec]. Must be larger than 200.

Example :

\$PMTK300,1000,0,0,0,0*1C<CR><LF>

Packet Type: 301 PMTK_API_SET_DGPS_MODE

Packet Meaning:

API_Set_Dgps_Mode

DGPS correction data source mode.

DataField:

PMTK301,Mode

Mode: DGPS data source mode.

'0': No DGPS source

'1': RTCM

'2': WAAS

Example:

\$PMTK301,1*2D<CR><LF>

Note:

If you wish to use set DGPS mode to RTCM, please use PMTK250 first to set RTCM baud rate before using this command



Packet Type: 313 PMTK_API_SET_SBAS_ENABLED

Packet Meaning:

API_Set_Sbas_Enabled
Enable to search a SBAS satellite or not.

DataField:

Enabled: Enable or disable
'0' = Disable, '1' = Enable

Example:

```
$PMTK313,1*2E<CR><LF>
```

Packet Type : 314 PMTK_API_SET_NMEA_OUTPUT

Packet Meaning :

API_Set_NMEA_Out
Set NMEA sentence output frequencies

DataField :

There are totally 19 data fields that present output frequencies for the 19 supported NMEA sentences individually.

Supported NMEA Sentences

- 0 NMEA_SEN_GLL, // GPGLL interval - Geographic Position - Latitude longitude
- 1 NMEA_SEN_RMC, // GPRMC interval - Recommended Minimum Specific GNSS Sentence
- 2 NMEA_SEN_VTG, // GPVTG interval - Course over Ground and Ground Speed
- 3 NMEA_SEN_GGA, // GPGGA interval - GPS Fix Data
- 4 NMEA_SEN_GSA, // GPGSA interval - GNSS DOPS and Active Satellites
- 5 NMEA_SEN_GSV, // GPGSV interval - GNSS Satellites in View
- 6 NMEA_SEN_GRS, // GPGRS interval - GNSS Range Residuals
- 7 NMEA_SEN_GST, // GPGST interval - GNSS Pseudo range Errors Statistics
- 13 NMEA_SEN_MALM, // PMTKALM interval - GPS almanac information
- 14 NMEA_SEN_MEPH, // PMTKEPH interval - GPS ephemeris information
- 15 NMEA_SEN_MDGP, // PMTKDGP interval - GPS differential correction information
- 16 NMEA_SEN_MDBG, // PMTKDBG interval – MTK debug information
- 17 NMEA_SEN_ZDA, // GPZDA interval – Time & Date
- 18 NMEA_SEN_MCHN, // PMTKCHN interval – GPS channel status



Supported Frequency Setting

- 0 - Disabled or not supported sentence
- 1 - Output once every one position fix
- 2 - Output once every two position fixes
- 3 - Output once every three position fixes
- 4 - Output once every four position fixes
- 5 - Output once every five position fixes

Example:

```
$PMTK314,1,1,1,1,1,5,1,1,1,1,1,1,0,1,1,1,1,1*2C<CR><LF>
```

This command set GLL output frequency to be outputting once every 1 position fix, and RMC to be outputting once every 1 position fix, and so on. You can also restore the system default setting via issue : \$PMTK314,-1*04<CR><LF>

Packet Type: 319 PMTK_API_SET_SBAS_Mode

Packet Meaning:

API_Set_Sbas Mode_Selection
Choose SBAS satellite test mode

DataField:

Mode=0: testing mode
Mode=1: Integrity mode

Example:

```
$PMTK319,0*25<CR><LF>  
$PMTK319,1*24<CR><LF>
```

Packet Type: 413 PMTK_API_Q_SBAS_ENABLED

Packet Meaning:

API_Query_Sbas_Enabled

DataField:

None

Return:

PMTK_DT_SBAS_ENABLED

Example:

```
$PMTK413*34<CR><LF>
```

The document is the exclusive property of GlobalTop Tech Inc. and should not be distributed, reproduced, or any other format without prior permission of GlobalTop Tech Inc. Specifications subject to change without prior notice

GlobalTop Tech Inc.

3rd Floor., No.7 Nan-ke 3rd Rd Science-based Ind. Park, Tainan 741-47, Taiwan, R.O.C.
Tel:+886-6-6007799 Fax:+886-6-5053381 <http://www.gtop-tech.com/> email: sales@gtop-tech.com
Copyright© 2009 GlobalTop Tech Inc. All right reserved.



Packet Type: 513 PMTK_DT_SBAS_ENABLED

Packet Meaning:

Enable to search a SBAS satellite or not.

DataField:

Enabled: Enable or disable

'0' = Disable, '1' = Enable

Example:

\$PMTK513,1*28<CR><LF>

Packet Type: 605 PMTK_Q_RELEASE

Packet Meaning:

Query the firmware release information.

DataField:

NONE

Return:

PMTK_DT_RELEASE

Example:

\$PMTK605*31<CR><LF>

Packet Type: 705 PMTK_DT_RELEASE

Packet Meaning:

Firmware release information.

DataField:

PMTK705,ReleaseStr,Build_ID,Internal_USE_1,(Internal_USE_2)

ReleaseStr: Firmware release name and version

3318 : Mcore_x.x

3329 : AXN_x.x

Build_ID: for firmware version control

Internal_USE_1: Internal only

Internal_USE_2: Internal only


PMTK705,AXN_1.3,2102,ABCD,*14<CR><LF>

Notice:

How to acquire that CheckSum value by checksum tool.

Example: `$PMTK226,3,30*4<CR><LF>`

1. Key in command contents

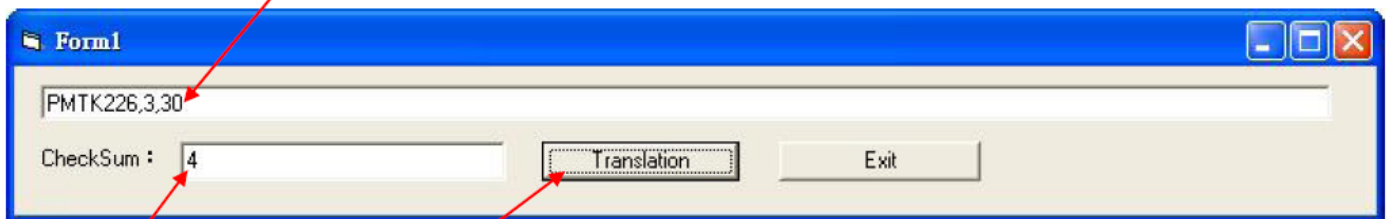

The screenshot shows a window titled 'Form1' with a text input field containing 'PMTK226,3,30'. Below it is a 'CheckSum' field containing '4'. To the right of the CheckSum field is a 'Translation' button, which is highlighted with a red arrow. Further right is an 'Exit' button. A red arrow also points to the 'Translation' button from the text '2. Click Translation' below the window.

2. Click Translation

3. That checksum will display

Command Setting Reset Notice

Those command packet for module baud and update rate changed only temporary, when module power reset those update rate and baud rate must be back to original setting. If user want to change baud rate and update rate of module to other value that need Gtop re-edit new firmware and burning it to module.